





Installation Guide

C MAX DIRECT FIX Tile on Channel


YOU WILL NEED

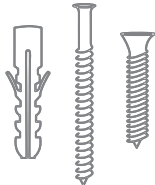

SCREWS

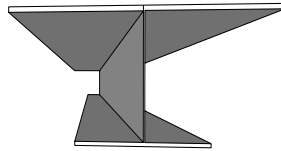

H CLIP

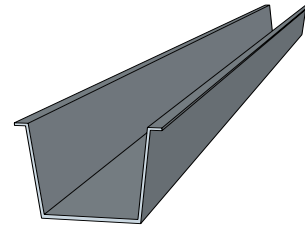

FURRING CHANNEL
OR TIMBER BATTEN

H-Clip - ■

Furring Channel - ———

C Max Direct Fix Tiles - - - - -

