





**DIRECT FIX**  
**INSTALLATION GUIDE**  
**FLOC WOOL ACOUSTIC PANEL**

**YOU WILL NEED**

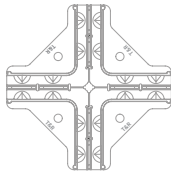

Floc Clips (Required number will equal the amount of tiles)

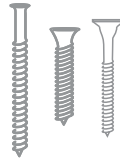


Screws




500x500 Floc Tiles


**STEP ONE**

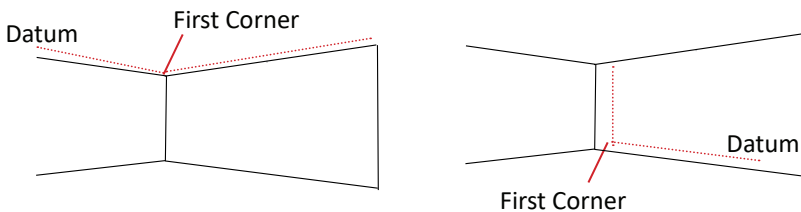


**STEP TWO**

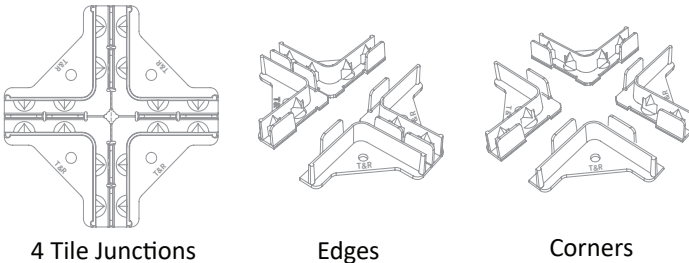


**STEP THREE**

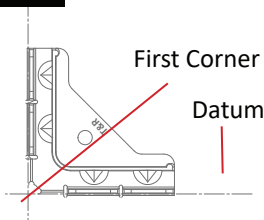

**STEP FOUR**

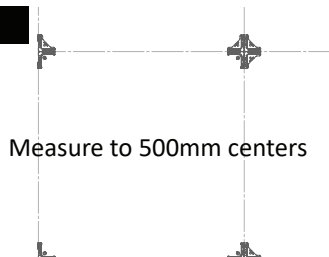

**STEP FIVE TO SEVEN**

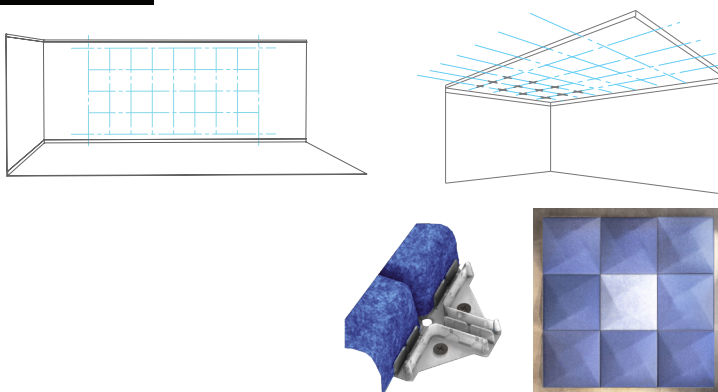

**STEP ONE**

Floc Acoustic Tiles are 500x500. Measure your ceiling or wall space and work out where you would like your tiles mounted as an area divisible by 500mm.

In most situations it is best to measure out from a wall. Mark a straight line. This is your datum. On the datum mark your first corner.

**STEP TWO**

For every junction of 4 tiles designate a focus clip. For all edges break one Focus clip in half. For the four corners break one Focus clip into quarters.

**STEP THREE**

Using fixings suitable for your substrate, fix the first corner in place (always use a mechanical means of fixing).

**STEP FOUR**

Work your way along the ceiling or wall, using a guide to ensure accuracy. Set out the clips at 500mm centers (never use the tiles to measure spacing).

**STEP FIVE**

Once you have reached the desired length, use another quarter clip. Start a new row and check the distance is consistently at 500mm centers in both directions.

**STEP SIX**

Once you have two rows of clips, double check your spacing by installing the first row of tiles. Always stay one row ahead of the installed tiles so the tiles don't interfere with the spacing.

**STEP SEVEN**

Install the rest of your clips and put up the tiles to finish.