





PHONIC ACOUSTIC CEILING TILES

INSTALLATION GUIDE PHONIC DIRECT FIX ON PLASTERBOARD

YOU WILL NEED

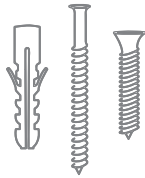



GIB Screws




H Clip




Wallboard Adhesive

H-Clip - 
C Max Direct Fix Tiles - 

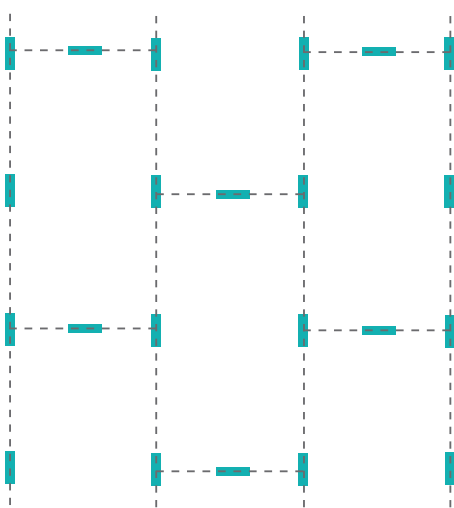

1200x600

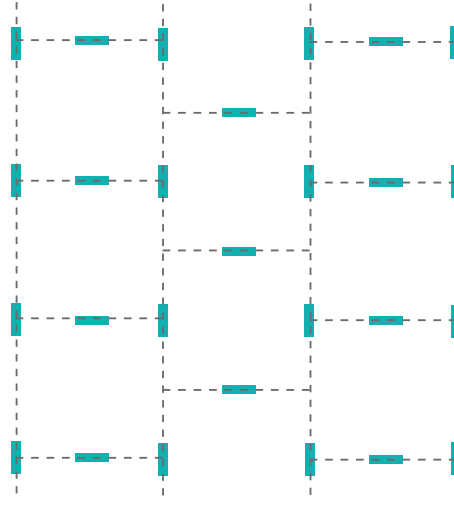

600x600

STEP ONE

Determine tile configuration and identify fixing points for the H Clips on the ceiling. The layout is dependent on the desired configuration. Ashlar pattern is recommended, especially where the ceiling may not be entirely level. Discuss with T&R interior Systems if you wish to do non-ashlar installation.

STEP TWO

Apply a couple of blobs of adhesive to the back of the tiles and place them onto the plasterboard ceiling. Use H Clips as per layout to secure into place. Complete one row at a time. Please note that there is a small airgap between the tiles and the plasterboard; the adhesive is there as a safety measure only and should not adhere the tile directly onto the plasterboard.

STEP THREE

Apply adhesive and slide the final tile into place. Prop until adhesive is dry.

